



1. Apply gloss cote to model surface.
2. Cut out the needed detail from the sheet.
3. Submerge the decal completely in lukewarm water for 10 sec.
4. Put the wet decal on plotting base and allow it soften completely.
5. Place the decal together with the base paper on the model. We recommended use decal solutions(Setter, Softer). Keep paper by tweezers and remove decal carefully to model surface. In case that the decal was placed incorrectly, add water with a brush on the border of the decal.
6. If the decal is located on the right place, press it with a soft cloth to eliminate all water and air bubbles.
7. Allow the decal dry well.

1. Naneste na povrch modelu lesklou barvu.
2. Vystríhněte z archu potřebný obtisk.
3. Obtisk zcela ponorte na 10 sec. do vlažné vody.
4. Umístěte mokrý obtisk na podkladovou desku a nechte jej zcela zméknot.
5. Umístěte obtisk spolu s podkladovým papírem na model. Doporučujeme použít obtiskové roztoky (Setter, Softer). Papír držte pinzetou a obtisk opatrně odstraňte na povrch modelu. V případě, že byl obtisk umístěn nesprávně, přidejte vodu štětcem na okraj obtisku.
6. Pokud je obtisk umístěn na správném místě, přitlačte jej měkkým hadříkem, abyste odstranili všechny bublinky vody a vzduchu.
7. Obtisk nechte dobře zaschnout.



Bell AH-1G Cobra 114th Aviation Helicopter Cavalry

DECALS IN 1/32 SCALE

200-D32013



AH-1G Cobra, 30, VC. Birth Control, 114th Aviation Helicopter Cavalry Division, flown by Bob Baker, Vinh Long, 1970, Vietnam War .



AH-1G Cobra, 32, 114th Aviation Helicopter Cavalry Division, flown by Jeff Carr, Vinh Long, 1970, Vietnam War .






AH-1G Cobra, 31, 114th Aviation Helicopter Cavalry Division, Vinh Long, 1970, Vietnam War .



AH-1G Cobra, 33, 114th Aviation Helicopter Cavalry Division, Vinh Long, 1970, Vietnam War .



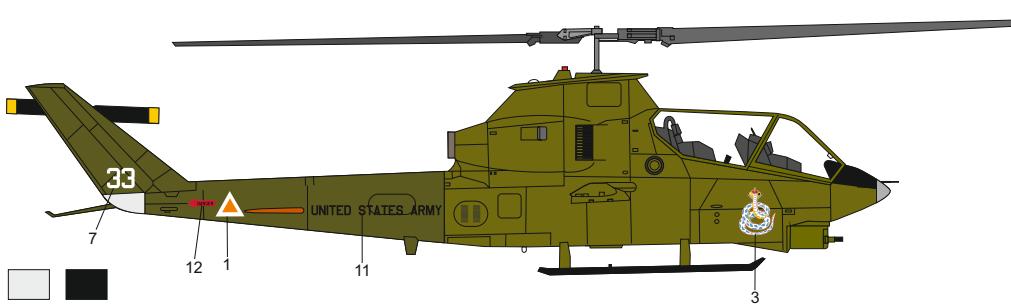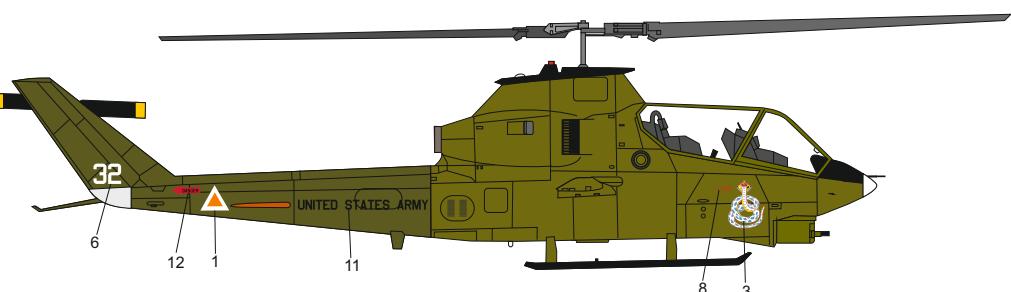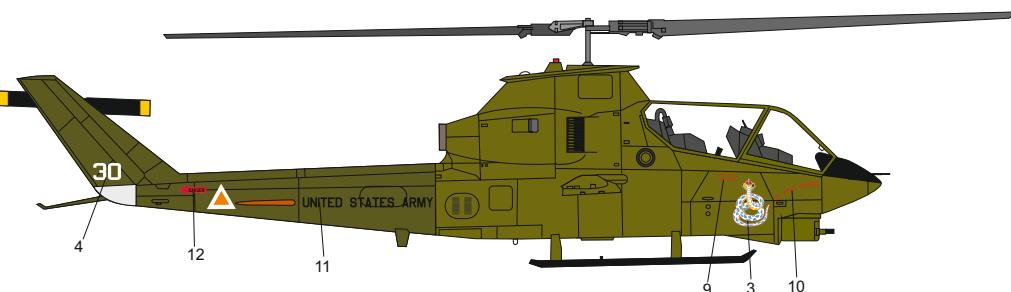

OLIVE DRAB YELLOW DARK OLIVE DRAB
DARK OLIVE DRAB LIGHT GREY BLACK