

**Curtiss Mohawk Mk IV  
over Egypt and Burma 1941-1943**

**DECALS IN 1/72 SCALE**

200-D72002



1. Apply gloss cote to model surface.
2. Cut out the needed detail from the sheet.
3. Submerge the decal completely in lukewarm water for 10 sec.
4. Put the wet decal on plotting base and allow it soften completely.
5. Place the decal together with the base paper on the model. We recommended use decal solutions(Setter, Softer). Keep paper by tweezers and remove decal carefully to model surface. In case that the decal was placed incorrectly, add water with a brush on the border of the decal.
6. If the decal is located on the right place, press it with a soft cloth to eliminate all water and air bubbles.
7. Allow the decal dry well.


1. Naneste na povrch modelu lesklou barvu.
2. Vystrihnete z archu potrebný obtisk.
3. Obtisk zcela ponořte na 10 sec. do vlažné vody.
4. Umístěte mokrý obtisk spolu s podkladovou desku a nechte jej zcela zméknot.
5. Umísteťte obtisk spolu s podkladovým papírem na model. Doporučujeme použít obtiskové roztoky (Setter, Softer). Papí držete pinzetou a obtisk opatrne odstraňte na povrch modelu. V případě, že byl obtisk umístěn nesprávně, přidejte vodu štětcem na okraj obtisku.
6. Pokud je obtisk umístěn na správném místě, přitlačte jej měkkým hadříkem, abyste odstranili všechny bublinky vody a vzduchu.
7. Obtisk nechte dobře zaschnout.




Curtiss Mohawk IV, no. 2537, No. 3 Squadron A-Flight, Alomata airfield, East African campaign, SAAF - South African Air Force 1941.



Curtiss Mohawk IV, no. 2524, No. 3 Squadron, Alomata airfield, East African campaign, SAAF - South African Air Force 1941.

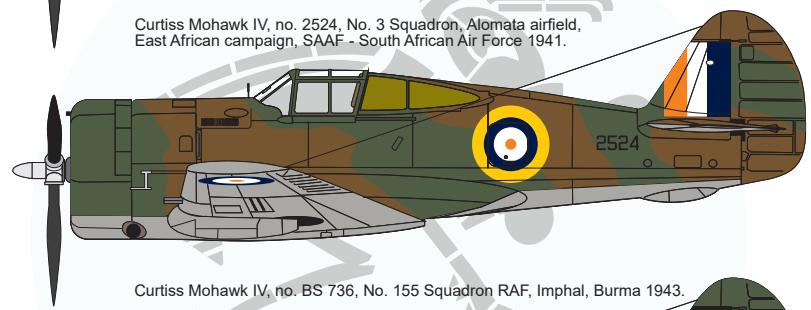

Curtiss Mohawk IV, no. BS 736, No. 155 Squadron RAF, Imphal, Burma 1943.

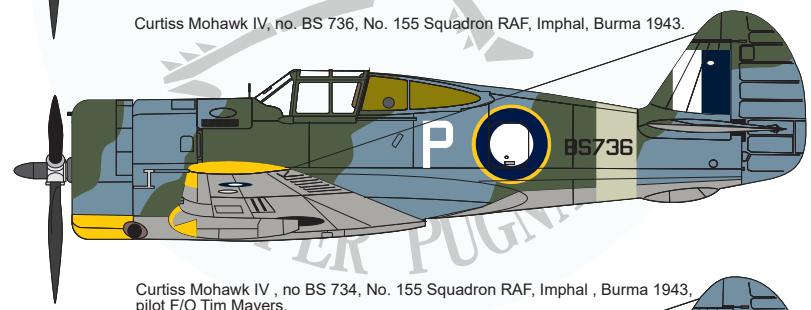

Curtiss Mohawk IV, no. BS 734, No. 155 Squadron RAF, Imphal, Burma 1943, pilot F/O Tim Mayers.

